


16a


crane retracted

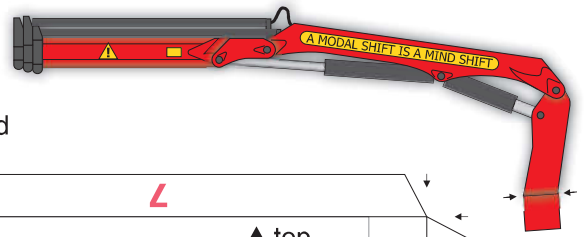

fold here before gluing



18

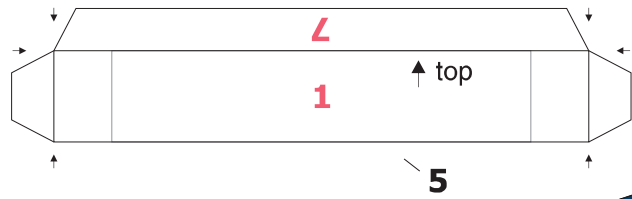

5

stick tab to
outside surface

1

1

form round this area

#IWTS: Mobilising potentials and capacity to move freight to smaller waterways

cut part 11 out and dryfit to the model, mark length excess and cut it out before gluing

11R

1

glue part 1 with coloured side inside

11L

2

2







2


fold the part along this line






fold the part along this line

cut part 11 out and dryfit to the model, mark length excess and cut it out before gluing

#IWTS: Mobilising potentials and capacity to move freight to smaller waterways

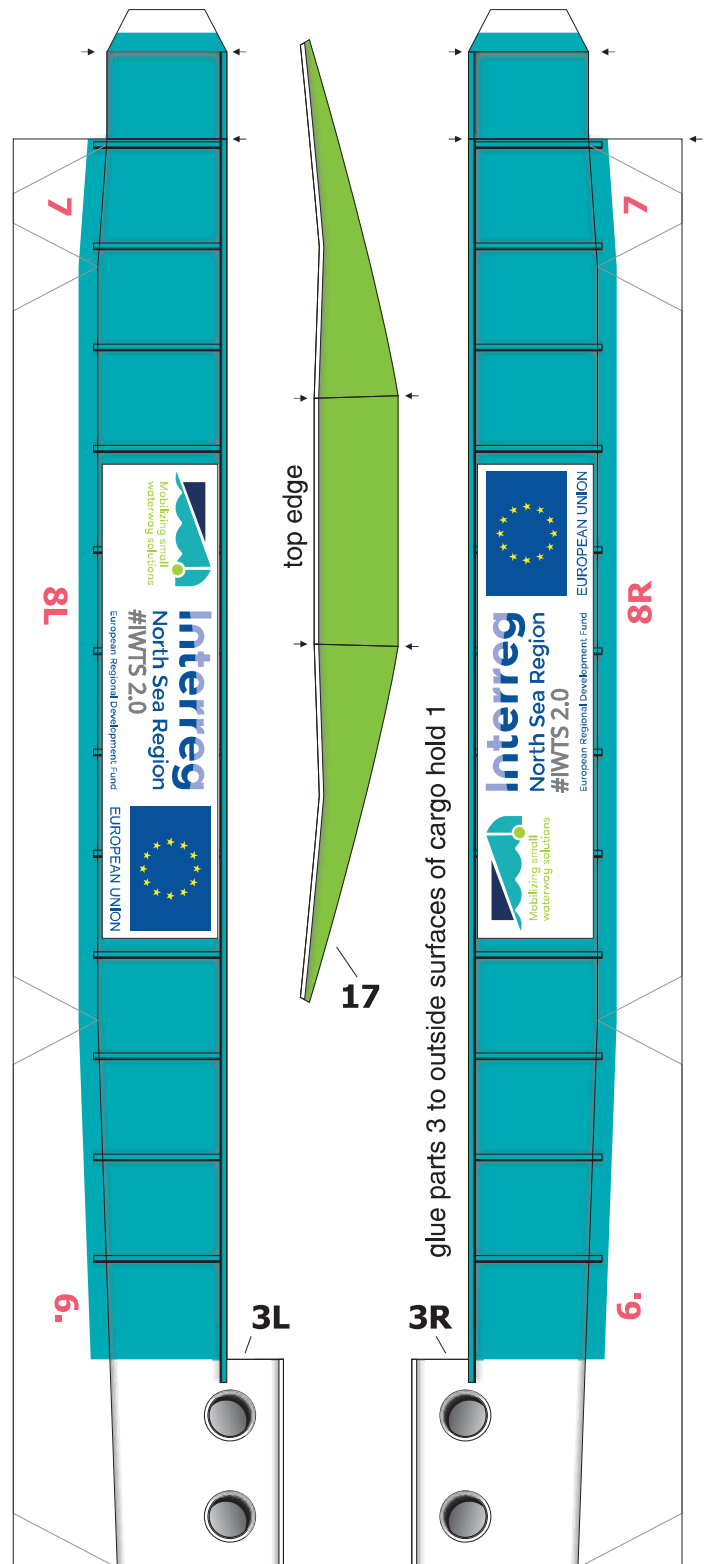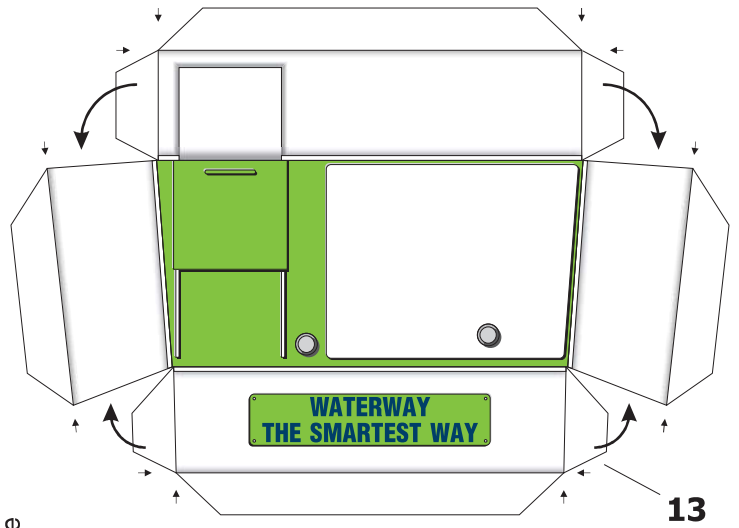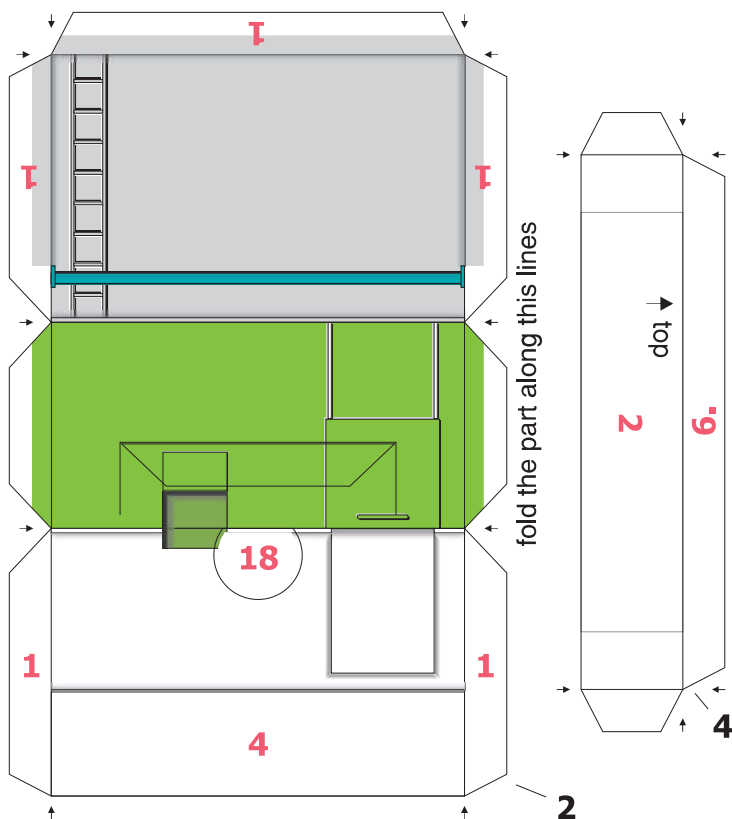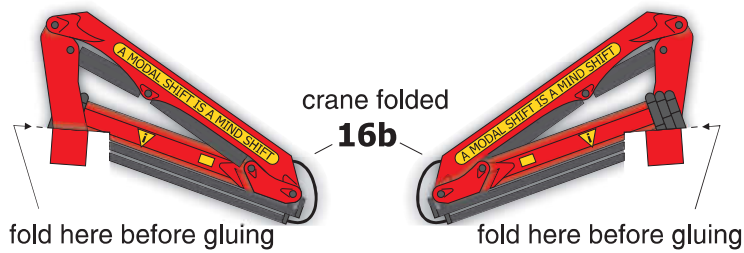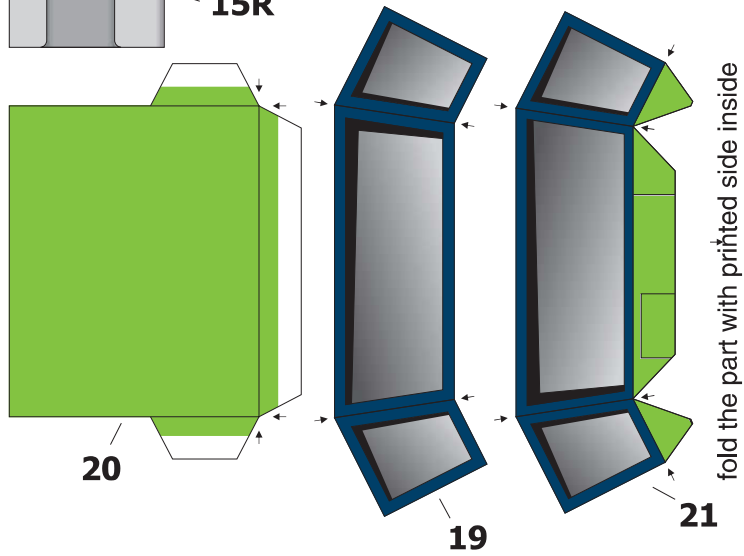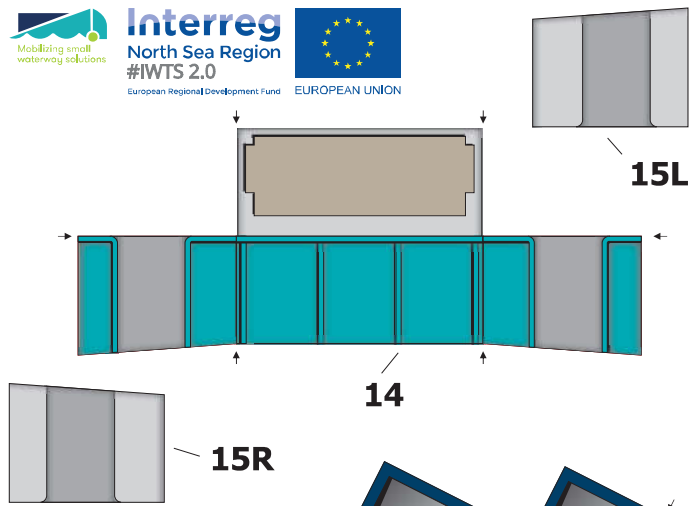



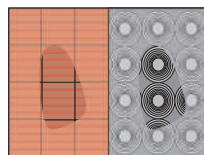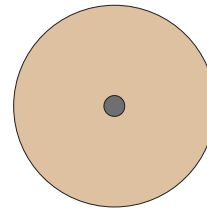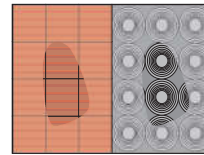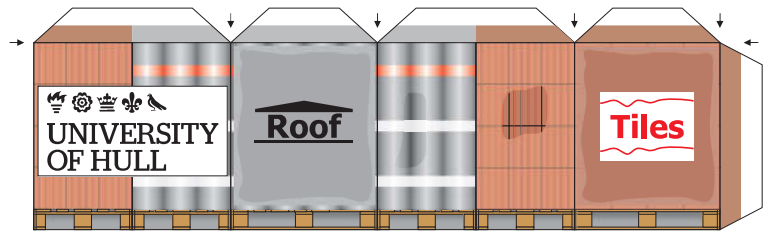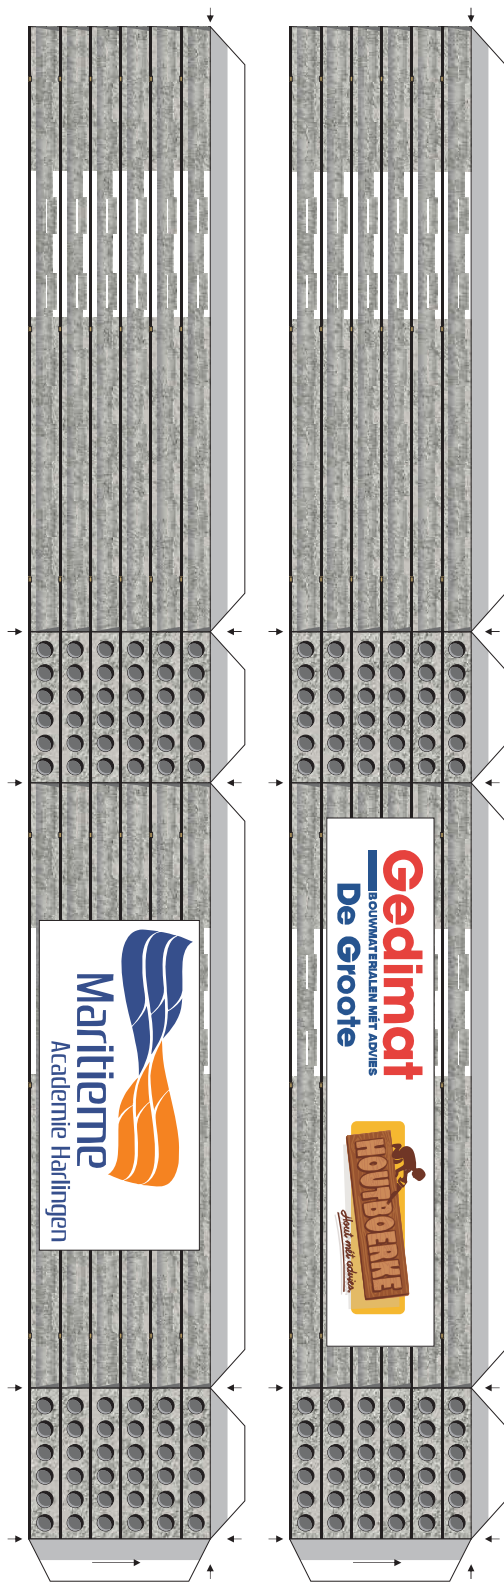

roll the part in tube before gluing

